


Logic Diagram CK2605

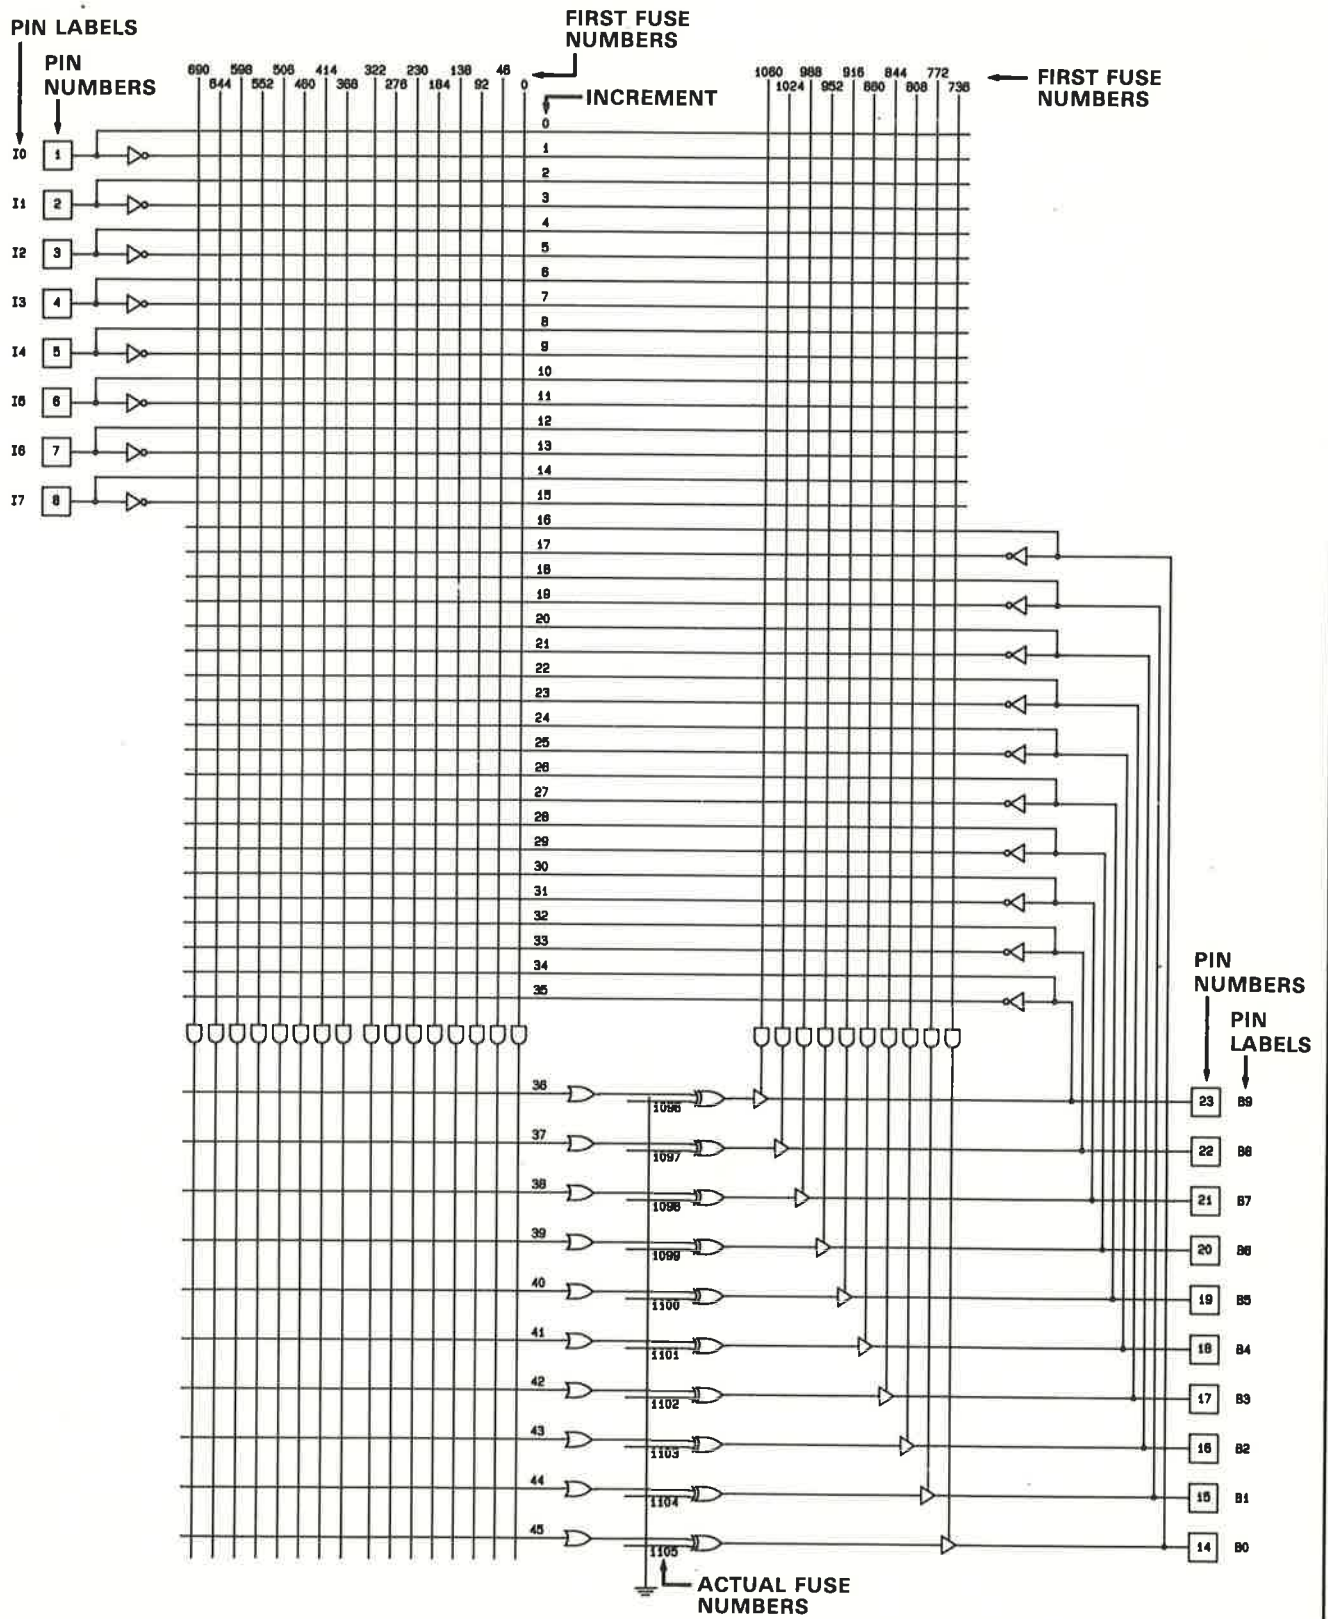

NOTE: Fuse Number = First Fuse Number + Increment

Figure A-14. Logic Diagram CK2605